

Copicat Gold Factory pre-set settings charts.

The settings shown below in the 'factory presets' are there as examples. They are used in the demo tracks and in the songs shown on the song-chart. They can all be edited and over-written with any settings that you like. They can be reinstated by using the factory initialization routine but this will erase any settings that you have put in. When they are loaded, they are put into the 12 users working memories i.e. the Memories buttons that you press.

○ = Bank light Off : ● = Bank light On : Alt = Alternative Echo Type light On.

Copicat Gold. Archive Memory 1 . Factory pre-set contents.

To load : Hold *Store, EchoType 6, Head Select 6* and Press *Memories 1.*

Memory Number	Bank Light	Echo Type	Type Description	Effect Module	Description of effect setting.
1	○	5.	Meazzi Model F	Echo	Heads 1,2,4,5.
2	○	5.	Meazzi Model F	Echo	Heads 1,2,4,5.
3	○	5.	Meazzi Model F	Echo	Heads 1,2,4,5.
4	○	5.	Meazzi Model F	Echo	Heads 1,4,5.
5	○	5Alt.	Meazzi Model 2	Echo	Heads 1,2,3,4,5.
6	○	5.	Meazzi Model F	Echo	Heads 1,2,3,4,5.
7	●	5.	Meazzi Model F	Echo	Heads 1,2,3,4,5.
8	●	2.	Meazzi Echomatic	Echo	Heads 1,2,3,4,5.
9	●	5Alt.	Meazzi Model 2	Echo	Heads 1,2,3,4.
10	●	5Alt.	Meazzi Model 2	Echo	Heads 1,2,3,4.
11	●	2.	Meazzi Echomatic	Echo	Heads 3,4.
12	●	2Alt.	Binson	Echo	Heads 1,5.













Copicat Gold. Archive Memory 2 . Factory pre-set contents.

To load : Hold *Store, EchoType 6, Head Select 6* and Press *Memories 2.*

Memory Number	Bank Light	Echo Type	Type Description	Effect Module	Description of effect setting.
1	○	5Alt.	Meazzi Model 2	Echo	Heads 1,2,3,4.
2	○	5Alt.	Meazzi Model 2	Echo	Heads 1,2,3,4.
3	○	5Alt.	Meazzi Model 2	Echo	Heads 1,2,3,4.
4	○	5Alt.	Meazzi Model 2	Echo	Heads 1,2,3,4.
5	○	5Alt.	Meazzi Model 2	Echo	Heads 1,2,3,4.
6	○	5Alt.	Meazzi Model 2	Echo	Heads 1,2,3,4.
7	●	5Alt.	Meazzi Model 2	Echo	Heads 1,2,3,4.
8	●	5Alt.	Meazzi Model 2	Echo	Heads 1,4.
9	●	Alt.	5 Meazzi Model 2	Echo	Heads 1,2,3,4.
10	●	2Alt.	Binson	Echo	Heads 1,2,4,5.
11	●	2Alt.	Binson	Echo	Heads 1,2,5.
12	●	2Alt.	Binson	Echo	Heads 1,4,5.













Copicat Gold. Archive Memory 3 . Factory pre-set contents.

To load : Hold *Store*, *EchoType 6*, *Head Select 6* and Press *Memories 3*.

Memory Number	Bank Light	Echo Type	Type Description	Effect Module	Description of effect setting.
1		5	Meazzi Model F	Echo	Heads 1,2,4,5.
2		5	Meazzi Model F	Echo	Heads 1,2,4,5.
3		5	Meazzi Model F	Echo	Heads 1,2,4,5.
4		5	Meazzi Model F	Echo	Heads 1,4,5.
5		5Alt	Meazzi Model 2	Echo	Heads 1,2,3,4,5.
6		5	Meazzi Model F	Echo	Heads 1,2,3,4,5.
7		5	Meazzi Model F	Echo	Heads 1,2,3,4,5.
8		2	Meazzi Echomatic	Echo	Heads 1,2,3,4,5.
9		5Alt	Meazzi Model 2	Echo	Heads 1,2,3,4.
10		5Alt	Meazzi Model 2	Echo	Heads 1,2,3,4.
11		2	Meazzi Echomatic	Echo	Heads 3,4.
12		5Alt	Meazzi Model 2	Echo	Heads 1,4.

Copicat Gold. Archive Memory 4 . Factory pre-set contents.

To load : Hold *Store*, *EchoType 6*, *Head Select 6* and Press *Memories 4*.

Memory Number	Bank Light	Echo Type	Type Description	Effect Module	Description of effect setting.
1		2	Meazzi Echomatic	Echo	Heads 2,3,4,5.
2		2	Meazzi Echomatic	Echo	Heads 1,3,4,5.
3		2	Meazzi Echomatic	Echo	Heads 3,4,5.
4		2	Meazzi Echomatic	Echo	Heads 4,5.
5		2	Meazzi Echomatic	Echo	Heads 1,2,3,4.
6		2	Meazzi Echomatic	Echo	Heads 3,4.
7		1	Copicat valve type	Echo	Heads 1,2,3.
8		1Alt	Copicat 4 Head IC400	Echo	Heads 1,2,3,4.
9		2Alt	Binson Echorec 2	Echo	Heads 1,2,3,4.
10		2Alt	Binson Baby	Echo	Heads 1,2,3,4.
11		3	Roland Space Echo RE301	Echo	Heads 1,2,3,4,5.
12		3	Roland Space Echo RE301	Echo	Head 4.

Copicat Gold. Archive Memory 5 . Factory pre-set contents.

To load : Hold Store, EchoType6, Head Select6 and Press Memories 5.

Memory Number	Bank Light	Echo Type	Head Select	Effect Module	Description of effect setting.
1		3Alt	1	Echo	Single slider echo using RE301. Many repeats.
2		DFx1	1	Reverb	Slap-back reverb.
3		DFx1	3	Phaser	Fast resonant phaser.
4		4	1,2,3,4,5.	Echo	Slow rise echoes.
5		DFx1	1	Reverb	Smallish dull reverb.
6		DFx1	6	Tremolo	Stereo auto pan.
7		DFx2	2	Envelope filter	Guitar triggered dual resonant high-pass filters.
8		DFx2	3	Distortion	Maximum overdrive.
9		DFx1	6	Dual flanger	Fast top skimming flange.
10		DFx1	2	Vibrato	Stereo only, slow vibrato - gives spatial movement.
11		2Alt	1,2,3,4,5.	Echo	Echo used as big chorus-echo with slow decay.
12		4Alt	1,2,3,4	Echo	Stereo ping-pong echoes.

DFx 2 is shown by the DFx (Echo Type 6) light flashing.

Copicat Gold. Archive Memory 6 . Factory pre-set contents.

To load : Hold Store, EchoType6, Head Select6 and Press Memories 6.

Memory Number	Bank Light	Echo Type	Head Select	Effect Module	Description of effect setting.
1		DFx1	1	Reverberation1	Big reverb.
2		DFx2	4	Reverberation2	Medium reverb.
3		DFx1	3	Phaser	Resonant medium sweep phase.
4		DFx1	4	Flanger	Set for deep chorus.
5		DFx1	5	Dual Flanger	Set for over-the-top flanging.
6		DFx1	5	Dual Flanger	Double flanging.
7		DFx2	1	Filter Sweep	Set for medium resonant low-pass sweep.
8		DFx2	2	Dual Envelope Filter	Set for medium resonant band-pass filter.
9		DFx2	3	Distortion	Medium distortion.
10		DFx2	2	Vibrato	Medium mono quick rise vibrato.
11		DFx1	4	Flanger	Typical flanger sweep.
12		DFx1	6	Tremolo	Medium smooth tremolo.